



INSTALLATION INSTRUCTIONS

PUSH TO SEAL BATH WASTE & OVERFLOW DR290

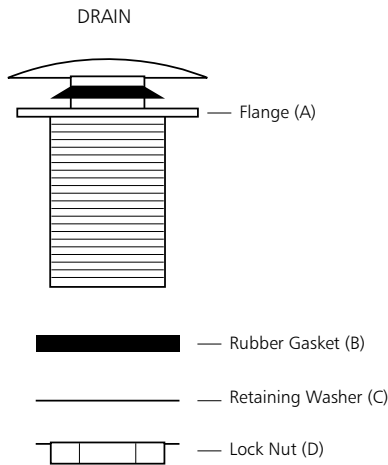

DRAIN

1. Separate all mounting hardware as shown.
2. Apply 100% silicone (non-water based) to underside of Flange (A) and then place directly into drain opening of the bathtub.
3. From underneath the bathtub slide the Rubber Gasket (B), the Retaining Washer (C), and the Lock Nut (D) onto the threaded seat of Flange (A) and tighten into position.

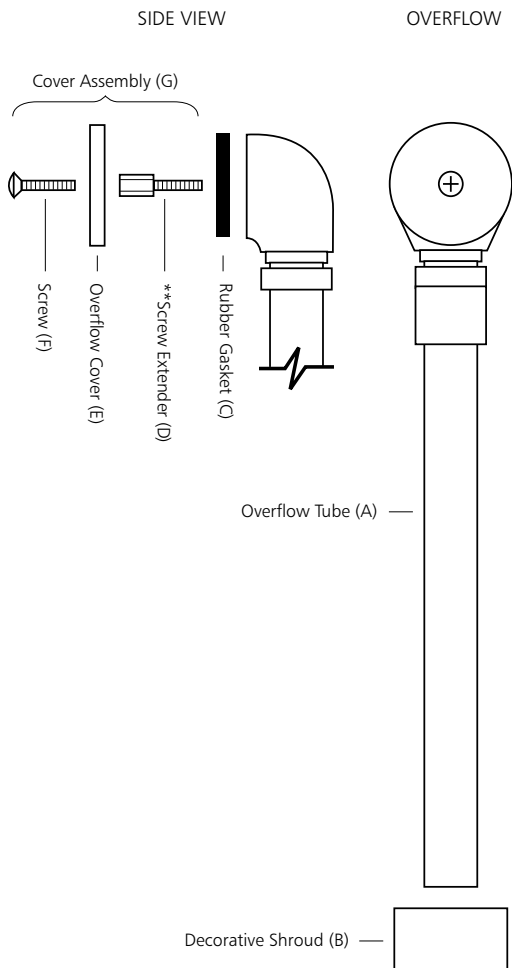

OVERFLOW

1. Cut Overflow Tube (A) to the appropriate length.*
2. Position Decorative Shroud (B) on the Overflow Tube (A) so that it will be above the opening in the subfloor when installed.
3. Insert the 2" Screw (F) through the Overflow Cover (E). For thick walled tubs thread the Screw Extender (D) onto the 2" Screw (F), creating the Cover Assembly (G). For thin walled tubs proceed to step 4.
4. Put Rubber Gasket (C) onto Overflow Tube (A) and align (from the outside) with the overflow hole of the tub, hold in place.
5. From the inside of the tub insert Cover Assembly (G) into the mounting hole on the Overflow Tube (A). Carefully tighten the Screw (F), making sure the Overflow Cover (E) is in the proper orientation (opening toward the bottom).

* We strongly recommend that the tub waste and overflow be installed by a professional installer. These instructions do not detail the necessary connections needed to connect the overflow tub and bathtub waste. Those connections will need to be made by the installer.

** Screw Extender (D) is used for Avalon or double walled tubs only.