

General Instructions:

CAUTION: Risk of personal injury. Native Trails Wall Mounts are extremely heavy, obtain sufficient help when lifting or moving.

CAUTION: Risk of property damage. Make sure that watertight seals exist on all drain connections, and that flooring, walls, and adjacent cabinetry are adequately protected while installing.

- It is strongly recommended that Native Trails wall mount vanities are installed by a licensed contractor.
- Observe all local plumbing and building codes.
- Have a licensed contractor determine if the wall is strong enough to adequately hold the weight of a full wall mount and applicable accessories.
- Ensure proper access to the final plumbing connections.
- Place a protective covering on the floor to prevent damage, unpack and inspect the wall mount for any damage.
- For ADA compliance, the Zaca Wall Mount must be installed in accordance with the requirements of ANSI/ICC A117.1 section 606.

Materials Recommended:


4" x 8" Wood Blocks	3/8" x 5" Lag Bolts	Simpson A34 brackets
3 total for 36"	4 total for 36"	12 total for 36"
4 total for 48"	6 total for 48"	16 total for 48"
90% Isopropyl Alcohol	Soft Cloth	Drywall Patching Kit

Tools Needed:

Level	1/4" Drill Bit
Pencil	Drill


1. Before installing Zaca Wall Mount, remove protective film and clean surfaces with alcohol to remove any adhesive residue.
2. Determine desired height and location.
3. Remove drywall and install blocking support according to **Figure 1**. Install 4" x 8" wood blocking between each stud to the full length of Zaca Wall Mount; 3 blocks for 36" Zaca Wall Mount, 4 blocks for 48". Attach blocking to studs with Simpson A34 brackets (not supplied) on top and bottom of each block as shown in **Figure 1**. Front face of blocking should be flush with front face of stud.

Figure 1 (front view)

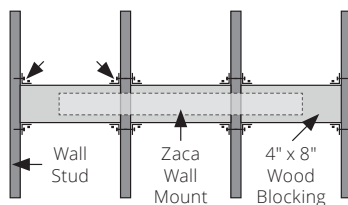

4. Replace drywall, marking location of installed blocking. Patch drywall as needed.
5. Using Zaca Wall Mount as a template, mark mounting holes.
6. Using a 1/4" drill bit, pre-drill mounting holes into installed wall blocking for 3/8" lag bolts (not supplied).
7. Attach Zaca Wall Mount to wall according to **Figure 2**.
8. Install NativeStone® Trough sink and drain according to installation instructions.

Figure 2 (top view)

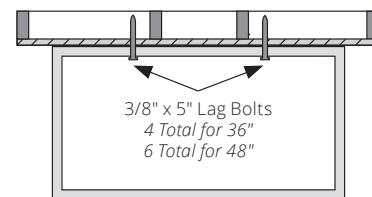

When cleaning up after installations, **DO NOT USE ABRASIVE CLEANERS**, as they may scratch and change the vanity surface. Use warm water, a soft cloth and a non-abrasive soap to clean the surface. Refer to the Care and Maintenance Instructions for more information.